

Authorizations

F

Product Information VTV-2

Buffer Amplifier VTV-2

Application / Specified Usage

· Galvanic separation of scaled signals (0...10 V, 0/4...20 mA)

Features

- · Isolation voltage 1 kV
- Variable zero and gain
- · Connection via plug-in terminal
- Scaled In/Output selectable and configurable
- On-site adjustment without external devices
- · Switchable without de-mounting by switches in front
- · Narrow design (22,5 mm)
- Power supply 20...255 V AC/DC
- · Snap-on case for mounting on standard DIN-Rail
- · Functional compatibility to Negele devices of VTV and ZTV series
- · Connection compatible to Negele devices of VTV series
- · Front panel shielded by see-throug cover
- · Special ranges possible on request




Specification		
Housing	acc. to DIN norm dimensions (W x H x D)	made of ABS for rail mounting acc. to EN50022 22.5 x 111 x 120 mm
Protection Class		IP 20
Ambient	operation temperature storage temperature humidity	0+55 °C -10+55 °C 095 % no condensation
Electrical connectvion		2.5 mm ² screw-type terminals pluggable
Input	switchable	Current 0/420 mA (R _i = 50 Ω) Voltage 010 V (R _i = 50 k Ω)
Output	2 relays for limit values 1 relay for failure indication	max. 250 V / 3 A AC changeover contacts
Output sensor supply	optional with VTV-2 / S	clamp 1 / 3 , 2024 V DC / 25 mA max.
Linearity error	adjustment on specific range	≤ ±0.2 % of end point ≤ ±0.1 % of end point
Temperature drift	typical	≤ 0.01 %/k
Isolation voltage	Input - Output Input/Output - Supply	1 kV 1 kV
Test voltage		1 kV / 50 hz / 60 s
Transmission frequency		≤ 30 hz
Supply	AC DC	24255 V, 4862 Hz, 4.5 VA 20255 V, 2.5 W
Power consumption		2.5 W / 4.5 VA
Weight		148 g


CONTROLS

CONTROLS

Electrical Connection | Installation

Drawing Electrical Connection | Front View

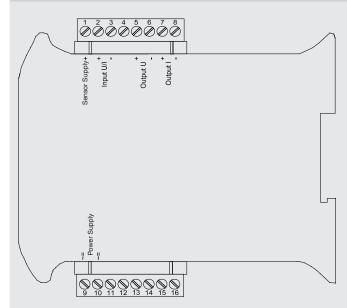

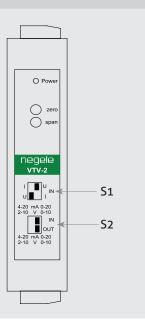

Potentiometer			
Name	Function	Adjustment range	
zero	offset	±5 %	
span	gain	±10 %	

Advice to Switch Position



The S1 switches "IN U/I" for switching the input from voltage to current must always be cross switched. Incorrect setting will not, however, cause damage. Correct operation of the plant can no longer be guaranteed in this state.

The switches may be switched only in the unstressed condition of the equipment.


Option Switch			
Name	Function	Adjustment	
IN I / U	Input switch (I/U)	Current / Voltage	
IN	Input switch 0 / 20 100 %	020 mA / 010 V or 420 mA / 210 V	
OUT	Output switch 0 / 20 100 %	020 mA / 010 V or 420 mA / 210 V	

Measurement Range			Switch		
Input	Output U	Output l	INI/U S1	IN S2	OUT S2
010 V	010 V	020 mA	U / U	0-10 0-20	0-10 0-20
010 V	210 V	420 mA	U / U	0-10 0-20	2-10 4-20
020 mA	010 V	020 mA	171	0-10 0-20	0-10 0-20
020 mA	210 V	420 mA	171	0-10 0-20	2-10 4-20
420 mA	010 V	020 mA	171	2-10 4-20	0-10 0-20
420 mA	210 V	420 mA	171	2-10 4-20	2-10 4-20

Adjustment

3

- 1. Set In-/Output combination of unit according to chart.
- 2. Connect set point device at Input (2/3)
- Connect external current measurement instrument (range 20 mA DC) in-line to current Output or voltage measurement device (range 10 V DC) parallel to voltage Output of VTV-2 (see block diagram above)
- 4. Connect power supply (9/10)
- 5. Induct zero signal (0/4 mA or 0 V) to Input
- Adjust output to 0 mA (4 mA for output 4...20 mA or 0 V for output 0...10 V) by twisting on "zero" trimmer
- 7. Induct maximal signal (20 mA or 10 V) to Input
- 8. Adjust maximum output to 20 mA or 10 V by twisting on "span" trimmer

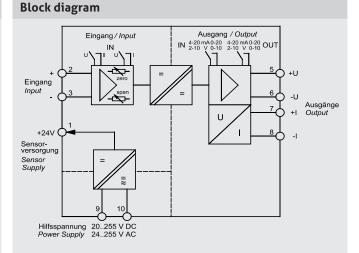

Conventional Usage

- · Not suitable for applications in explosive areas.
- Not suitable for applications in security-relevant equipments (SIL).

Reshipment



• Use suitable transport packaging only to avoid damage of the equipment!

Standards and Guidelines

- You have to comply with applicable regulations and directives.

Advice to EMC

- The device agrees to following standards: EMC directive 2004/108/EC.
- You have to guarantee the EMC directives for the entire equipment.

Advice

 For installation and adjustment please pay attention to additional informations given in the data sheet enclosed with the device.

Transport / Storage

- No outdoor storage
- Dry and dust free
- · Not exposed to corrosive media
- \cdot Protected against solar radiation
- \cdot Avoiding mechanical shock and vibration
- Storage temperature -10...+55 °C
- · Relative humidity maximum 95 %

Disposal

- This instrument is not subject to the WEEE directive 2002/96/EC and the respective national laws.
- Pass the instrument directly on to a specialised recycling company and do not use the municipal collecting points.

1



CONTROLS

Order Co	ode			
VTV-2				
		rsupply		
	X	(without)		
	SV	/ (sensor supply integrated)		
	Special Range			
		X (standard)		
•	V	special (special range ↓	acc. to customer requirements, please specify in plaintext, on request)	
VTV-2 /	SV /	Х		

Notes

50054 / 3.0 / 2015-02-16 / TB / EU

NEGELE MESSTECHNIK GMBH Raiffeisenweg 7 87743 Egg an der Guenz Phone +49 (0) 83 33 . 92 04 - 0 Fax +49 (0) 83 33 . 92 04 - 49 sales@anderson-negele.com Tech. Support: support@anderson-negele.com Phone +49 (0) 83 33 . 92 04 - 720