




GENERAL DESCRIPTION

- Revo M has been specifically designed to be an Universal Unit
- RS485 Comm. MODBUS Protocol Standard
- Frontal Key Pad to configure the unit and to read V,I and Power
- Configurablity via RS485, USB Port and frontal Key Pad
- Microprocessor based electronic circuit fully isolated from power
- Universal input signal: RS485,Pot, Analog and SSR
- Firing Mode: Zero Crossing and Burst Firing Mode with programmable cycle time
- Configurable Control Mode: V and VxI
- Heather Break alarm to diagnose partial or total load failure and Thyristor Short circuit
- Digital input configurable
- Fixed Fuses Standard
- Current transformer integrated in the unit
- Comply with EMC, cUL pending
- IP20 Protection
- Panel mounting

TECHNICAL SPEC	CIFICATION									
Voltage power supply	From 24V to 480V Max (Std) or 600V on request									
Voltage Frequency	50 or 60 Hz no setting needed from 47 to 70 Hz									
Nominal Current	60A, 90A, 120A, 150A, 180A, 210A									
Input Signal	SSR (logic) 4:30Vdc 5mA Max (On ≥ 4Vdc Off ≤ 1Vdc); Voltage input 0:10Vdc impedance 15 K ohm; Current input 0:20/4:20mA impedance 100 Ohm;									
Digital input	4:30V dc 5 mA Max (On > 4Vdc Off < 1Vdc)									
Firing	Burst Firing and Zero Crossing with possibility to set number of Burst and cycle time									
Control Mode	Voltage Current and Power selectable via frontal Key Pad, and RS485 or via Digital input to transfer from one control mode to another one to estabilish a control strategy.									
Auxiliary Voltage Supply	90:130Vac 8VA Max 170:265Vac 8VA Max (Standard) 230:345Vac 8VA Max 300:530Vac 8VA Max (Standard) 510:690Vac 8VA Max									
Heater Break Alarm	HB alarm setting on front unit or RS485 with possibility to set sensitivity. Relay output 0,5A at 110V									
Mounting	Panel Mounting									
Operating Temperature	40 °C without derating. Over this temperature see below derating curve									
Storage temperature	-25 °C to 70 °C Max									
Altitude	Over 1000 m of altitude reduce the nominal current of 2% for each 100m									
Humidity	From 5 to 95% without condense and ice									

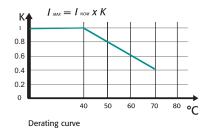

USER'S MANUAL

1

OPTION'S FEATURES AND SPECIAL DETAILS

HEATER BREAK ALARM HB

ON FRONT CABINET



= FEW MINUTES TO SET AND CALIBRATE ALL THE UNITS

The Heather Break circuit diagnostic partial or total load failure. It reads load resistance with an internal voltage transducer and current transformer to calcolate the resitance value V/I.


The Heather Break circuit is compensated for voltage fluctuation, infact a voltage variation has no influence on resistance value because V/I ratio remain constant.

On this unit is possible to set the nominal resistance value and the alarm sensitivity.

HB alarm in addition diagnostic the thyristor in short circuit.

A normaly open contact gives the alarm condition and an indication of the alarm type appears on display.

BURST FIRING BF




This firing is performed digitally within the thyristor unit at zero volts, producing no EMC interference. Analogue input is necessary for BF and the number of complete cycles must be specified for 50% power demand. This value can be between 1 and 255 complete cycles, determining the speed of firing. When 1 is specified, the firing mode becomes Single Cycle (SC).

FIELD BUS MODULE



CD-RS Used to convert RS232 to RS422 TU-RS485-PDP Used to convert RS485 Modbus to Profibus DP TU-RS485-ETH Used to convert RS485 Modbus to Ethernet For more informations see "Field Bus Module" Bulletin

POWER SCALING



It's a scaling factor of the input command signal and limit the output of Thyristor unit. This parameter can be adjusted from 1 to 99% via RS485 or by the front of the unit If this parameter is setted at 50% and the input signal is 100% the output become 50% This feature is very useful to reduce the power when a zone has been oversized or when a temperature controller gives same reference to more unit along a furnace.


Imagine 3 zones with left and right one close to the doar where in acontinuos furnace the material come into and flow out. The profile of temperature along furnace is higher in central zone because there is less dispersion but if we scale its input we can have a flat profile.

APPLICATIONS AND FOCUS ON:

- Infrared lamp.
- Fournaces.
- Petrochemical
- Dryers
- Pharmaceutical

- Autoclaves.
- Chemical
- Extrusion line.
- Climatic chambers

WIRING CONNECTION M 2PH from 60A to 210A

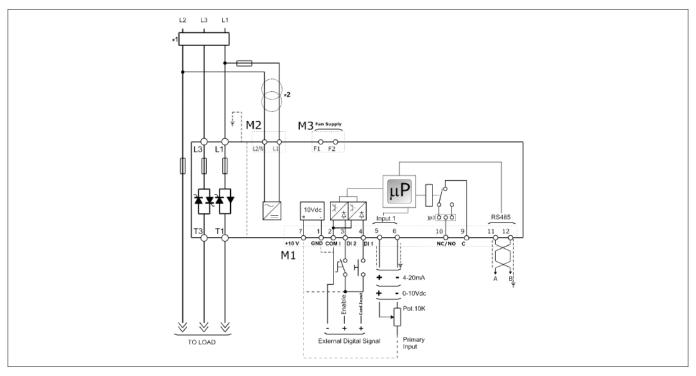

LOAD TYPE



STAR without neutral Resistive or Infrared Lamps Long and medium waves

LOAD TYPE




DELTA Resistive or Infrared Lamps Long and medium waves

NOTE


- (1) The user installation must be protecting by electromagnetic circuit breaker or by fuse isolator. The semiconductor I²t should be 20% less than power controller I²t. Semiconductor fuses are classified for UL as supplemetar protection for semiconductor. They are note approved for branch circuit protection.
- (2) The auxiliary voltage supply of the Revo M unit must be synchronized with loadvoltage power supply. If the Auxiliary Voltage (written on the identification label) is different from Supply Voltage (to the load), use an external transformer as designated.

DIMENSION AND FIXING HOLES

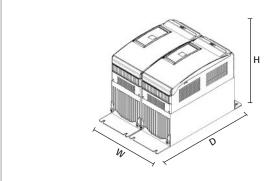


SR13 W 186 mm. - H 269 mm. - D 170 mm. - kg. 6,8


60A - 90A

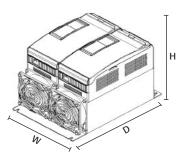

SR16 W 186 mm. - H 273 mm. - D 170 mm. - kg. 7

120A - 210A

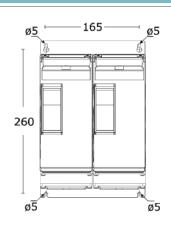

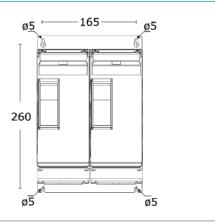

OUTPU	OUTPUT FEATURES (POWER DEVICE)														
Current A	Voltage range (V)	Ripetitive peak reverse voltage (480V) (600V)		Latching current (mAeff)	Max peak one cycle (10msec.)	Leakage current (mAeff)	I2T value for fusing tp=10msec.	Frequency range (Hz)	Power loss I=Inom (W)	Isolation Voltage Vac					
60A	24÷600V	1200	1600	450	100	15	4750	47÷70	130	2500					
90A	24÷600V	1200	1600	450	2000	15	19100	47÷70	168	2500					
120A	24÷600V	1200	1600	450	1540	15	11300	47÷70	276	2500					
150A	24÷600V	1200	1600	450	2000	15	19100	47÷70	324	2500					
180A	24÷600V	1200	1600	450	4800	15	108000	47÷70	356	2500					
210A	24÷600V	1200	1600	450	5250	15	128000	47÷70	404	2500					

Fan Specification	
Supply: 230V Standard	Input Power 16W
Supply: 115V Option	Input Power 14W

		1	2	3	4	5	6		7	8	9	10	11	12	13	14	15	Note 16		
REVO M 2PH		R	M	2	_	_	_	-	_	_	_	_	_	_	_	_				
4,5,6 Current		8 Aux. Voltage supply					11 Control Mode						14 Approvals							
Description code	Numeric code	Description code			N	Numeric code		Description code Numeric code					Desc	Numeric code						
60A	060	90:130V (2)				1		Open Loop			1100	0		CE EMC For European						
90A	090	170:265V (2)				2		Voltage Feed Back V			_	U			0					
120A	1 2 0	230:345V (2)				3						w	\dashv [cUL F						
150A	150		300:530)V (2)		5		Current Feedback I			+	1		Market, Pending			L			
180A	180	510:690V (2)				6		Cullent Feedback I				_ ;								
210A	2 1 0							12		Fuse &	Optio	on		15		Manı	ual			
7 Max Voltage		9 Input				Description code Numeric code					Description code Numeric co				ic cod					
7 Max Voltage		Description code Nu			Numeric code		Description code		Nun			None			0					
Description code	Numeric code	SSR			S		Fixed Fuse		_	F	-	Italian Manual		ıal	1					
480V	4	0:10V dc 4:20mA				V A		Fixed Fuse + CT Fixed Fuse +CT +HB Control Mode			-	Y H		English Manual German Manual			2 3			
600V	6											н								
		10KPot			K								French Manual		ıal	- 4	4			
			RS485 R					Retransmission 4:20mA A					_							
			10 Firing					Control Mode					16 Version Description code Numeric cod							
		10						Retransmission 0:10mA V										_		
		Description code			N	Numeric code		17						Std with fixed Fuse				1		
		7	Zero Crossing ZC Z				13 Fan Voltage					Stu With fixed ruses					1			
			Burst Fir			B		Des	cription	code	Nun	neric cod	е							
			Daist III	5 1				No	Fan <	90A		0								
								_			+	-	-							
								Fan	110V ≥	2 90A		- 1								

Fan 220V ≥ 90A Std Version

LEGEND
CT = Current Transformer
HB = Heater Break Alarm

Note (1): After 16th digit write current and voltage of load inside brackets Ex. (40A-400V) Note (2): Load voltage must be included in Selected Auxiliary Voltage Range

